
Network settings



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

To the certification exam

This section allows to assign an IP address or several addresses to the wired interface, the default gateway value can also be specified.

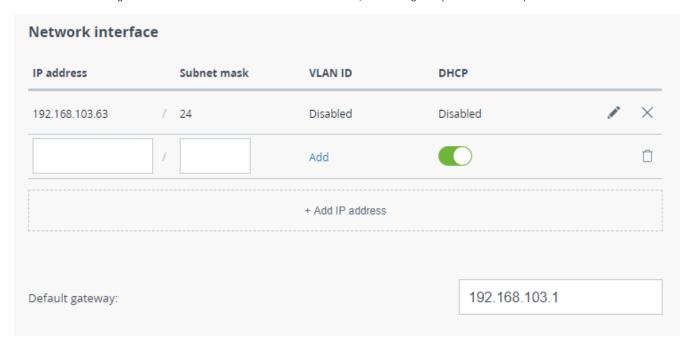

Click the "Add IP address" button to add a new address. There are two ways to assign an IP address:

- Automatically the IP address will be obtained automatically from the DHCP server.
- Manual the IP address and netmask are specified manually.

The VLAN tag value can also be set in this section, the VLAN ID value should be in range from 1 to 4096.