

Network settings



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

This section allows to assign an IP address or several addresses to the wired interface, the default gateway value can also be specified.

Network interface

IP address	Subnet mask	VLAN ID	DHCP	
192.168.103.63	/ 24	Disabled	Disabled	
	/	Add	☒	

+ Add IP address

Default gateway:

Click the "Add IP address" button to add a new address. There are two ways to assign an IP address:

- Automatically - the IP address will be obtained automatically from the DHCP server.
- Manual - the IP address and netmask are specified manually.

The VLAN tag value can also be set in this section, the VLAN ID value should be in range from 1 to 4096.