DFS menu




Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

To the certification exam

The "DFS" page provides the monitoring and management of the DFS operation. The DFS status and availability indicators are shown for each frequency for the given band and grid. The indicators are described in the Legend at the bottom of the page.

By clicking the «Clear NOL» button, you clear the non-occupation list with the blocked frequencies (due to the radars detected on these frequencies). The DFS subsystem rescans those frequencies and if they are still not available, the scanning starts after the time period displayed in the right bottom corner of the frequency indicator.

By clicking the «**Re-select Channel**» button, you restart the DFS scanning.

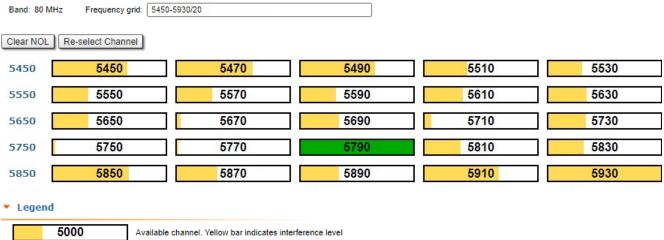

5000	Available channel. Yellow bar indicates interference level
5005	Channel in use
5010 _{30s}	Channel availability check in progress. Remaining time shown at bottom right
5015	Channel monitoring active
5020 30m	Blocked channel. Remaining time shown at bottom right
5025	Inconsistent configuration
5030	Non-verified channel

Figure - DFS