

route command (static routes configuration)



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

- [Description](#)
- [Parameters](#)
- [Examples](#)

Description

The "*route*" command provides with manual management of system routing tables. In the normal mode, when a dynamic routing is active, this command is not needed. However, in some cases it allows to achieve more precise, non-standard configuration.

Syntax:

```
cmd: add, delete
args: NET[/MASK] GATEWAY [-iface] [-nostatic]
```

Parameters

Parameters	Description
<i>add NET[/MASK] GATEWAY</i>	Adds a route to a table. <ul style="list-style-type: none">• "<i>NET[/MASK]</i>" – destination network/host IP-address. The parameter can be specified in the following formats:<ul style="list-style-type: none">• network-address/mask length;• network-address:mask;• network-address;• default.• "<i>GATEWAY</i>" – IP-address of a router through which a destination network/host is attainable.
<i>delete NET[/MASK]</i>	Deletes a route from a table.
<i>[-iface]</i>	Routing through the network interface. An IP-address of the interface through which routing is assigned becomes a gateway IP-address.
<i>[-nostatic]</i>	All routes that are described using the " <i>route add</i> " command have absolute priority. No dynamic routing protocols including DHCP can replace the static route in the routing table. " <i>nostatic</i> " option deny that. E.g. DHCP may place a new default route in the table, after it disappears a static route will be restored to the previous value.

Examples

Add the route to the table.

```
route add default 195.38.44.129
route add 193.124.189.0/27 195.38.44.108
route add 193.124.189.0:255.255.255.224 195.38.44.108.
```