

Adding hosts and links



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

- [Auto-discovering](#)
- [Adding hosts](#)
- [Adding links](#)

In order to start hosts monitoring by **InfimONITOR** it is necessary to add them to the system, first. There are two methods:

- **The manual** - each host should be added to the monitoring system manually
- **The automatic** - it is sufficient to add at least one or several hosts, depending on a network structure afterwards **InfimONITOR** will automatically add all the rest connected hosts.



NOTE

Please note, before adding hosts to the system SNMP parameter must be enabled on them. This process is described in the section "[SNMP configuration](#)".



NOTE

The following networks are reserved by InfimONITOR and unavailable for monitoring:

- 172.17.0.0/16
- 172.18.0.0/16

Please change your IP addresses of your wireless units if they are placed in these networks.

Auto-discovering

InfimONITOR performs automatic hosts search via the MINT technology (see [Description and working principles of InfimONITOR](#)). By default, the automatic search function is enabled, to check it, proceed to the section "Settings" -> "Discovering".

Auto-discovering

Auto-discovering is enabled

[Disable auto-discovering](#)

InfimONITOR can automatically find and add all of your hosts connected to one MINT network. Auto-discovering works constantly and tries to find all of the neighbors of each host, using SNMP authentication data known from already manually added hosts. If you want automatically find and add hosts from another MINT networks you should add at least one host from those networks.

Figure - Authorization in InfimONITOR web-interface

In order to disable the automatic hosts search and addition function, click the "**Disable auto-discovering**" button. It possible to re-enable at any time.

Adding hosts

In order to add the hosts go to the section "Settings" -> "Hosts management". Here is the list of all hosts added earlier with the following parameters:

- *Host name*
- *IP-addresses*
- *Family*
- *Device serial number*
- *Status* - the current host status. There are the following possible options:

- **Up** - Monitoring system has access to the host via the SNMP protocol
- **Unknown** - Monitoring system has no access to the host via the SNMP protocol at the moment, however the access has been recently lost.
Possible reasons:
 - Host is powered off or is rebooted suspiciously often
 - "SNMP Agent" is not started in host configuration
 - IP-address and SNMP credentials (protocol version, Community name, user name and password) mismatch with data stored in InfiMONITOR for this host
 - Host is too busy with client traffic and hence SNMP agent replies are sent with great latency
 - SNMP port 161 is closed by firewall in host configuration or at some network point between the host and InfiMONITOR server
 - Routing of SNMP datagrams is not properly set at some network point between the host and InfiMONITOR server
 - UDP datagrams fragmentation is broken at some network point between the host and InfiMONITOR server
 - SNMP traffic is shaped too much at some network point between the host and InfiMONITOR server
 - SNMP configuration in InfiMONITOR has settings with too short timeouts and/or too few retries.
- **Down** - Monitoring system has no access to the host for considerably long time period via the SNMP protocol. Possible reasons:
 - Any of two endpoint hosts is not activated in INfiMONITOR due to license restriction
 - Any of two endpoint hosts is in status "Unknown"
 - Wireless connection was not established between the endpoint hosts in the moment of last polling of either one or another host. If you are sure that wireless connection is OK right now, then be patient and wait while both endpoint hosts will be polled again (up to 300 seconds by default)
- **Deactivated** - Deactivated host, which is put out of action and without license

Settings / Hosts management

Server date and time: 2017-06-15, 18:08:4

Search...

All statuses

Add host


Pending hosts (0)

Host name ^	IP-addresses	Family	Device serial nu...	Status
Abonent 1	1.67.1.7	R5000	981206	Up
Abonent 2	1.67.1.8	R5000	981207	Up
Abonent 3	1.67.1.9	R5000	981208	Up
Abonent 4	1.67.1.10	R5000	981209	Up

Figure - Added hosts

In order to add hosts click the "Add host" button, the window with the following fields will appear:

- "IP-address" - the added host IP address which InfiMONITOR will use to poll the host
- "SNMP Port" - the network port for the SNMP service to be is available on the host. By default, 161
- "SNMP Version" - the SNMP protocol version, which has to be used by the monitoring system for data receiving from the host. By default, v3
- SNMP protocol authentication data:
 - "SNMP Community" - the group name for versions authentication. It is applicable for the following SNMP Versions: v1, v2c
 - "SNMP Login" - the SNMP protocol user's account name. It is applicable for the following SNMP Version: v3
 - "SNMP Password" - the SNMP protocol user's account password. It is applicable for the following SNMP Version: v3.

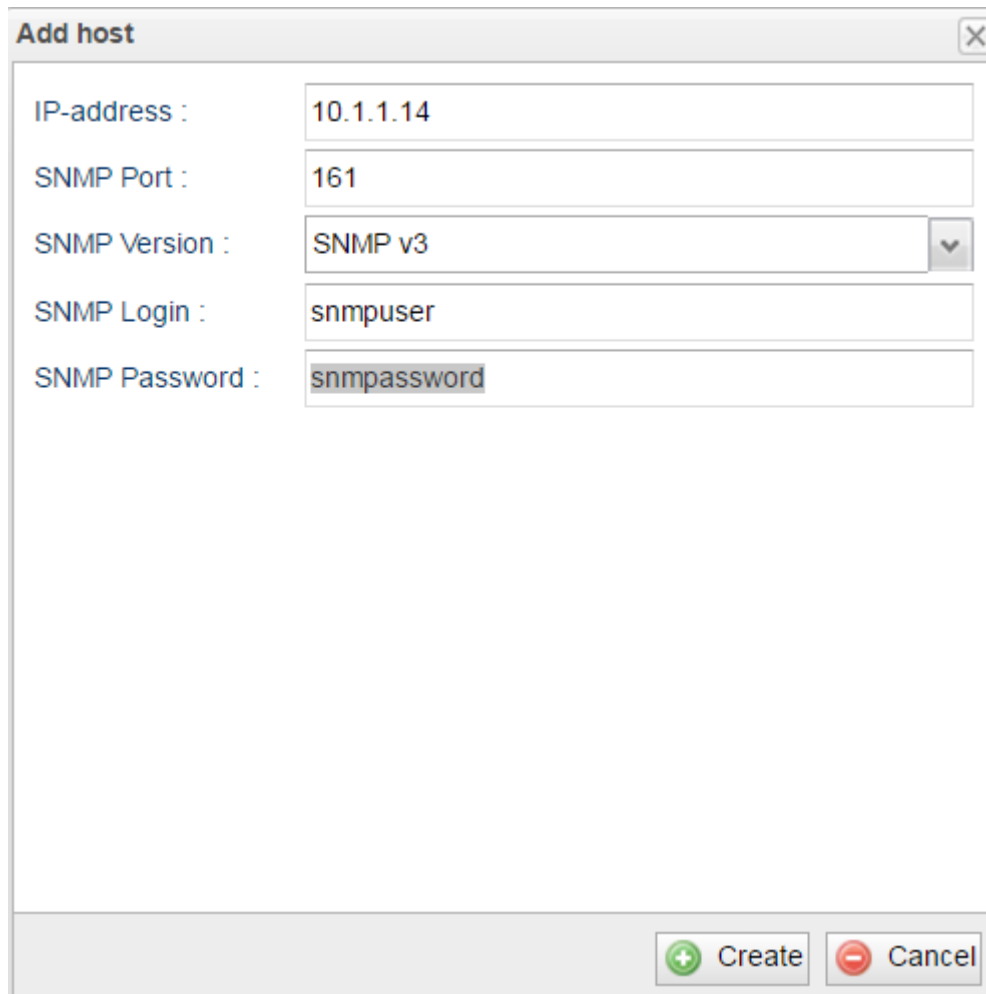A screenshot of a software dialog box titled "Add host". The dialog box has a close button (X) in the top right corner. It contains five input fields: "IP-address :" with the value "10.1.1.14", "SNMP Port :" with the value "161", "SNMP Version :" with a dropdown menu showing "SNMP v3", "SNMP Login :" with the value "snmpuser", and "SNMP Password :" with the value "snmpassword". At the bottom right, there are two buttons: a green "+ Create" button and a red "- Cancel" button.

IP-address :	10.1.1.14
SNMP Port :	161
SNMP Version :	SNMP v3
SNMP Login :	snmpuser
SNMP Password :	snmpassword

Figure - Adding the device


Click the "**Create**" button after filling all the fields.

Adding host procedure

The host would not be added instantly, only after its polling. The procedure to add the host consist from the following steps:

1. The host is put into the polling pending queue after being added by the user. At this stage it has not yet been added to the monitoring system and will not be displayed in the common list
2. After a short period of time **InfimONITOR** will start the host polling
3. If access to the host via the SNMP protocol has been received, the monitoring system will receive all the necessary information and then perform its addition
4. If **InfimONITOR** could not get access to the host via the SNMP protocol, the polling will be postponed until the next polling cycle. This process will continue until gaining access to the host.

To see the pending hpsts click the "**Pending hosts**" button

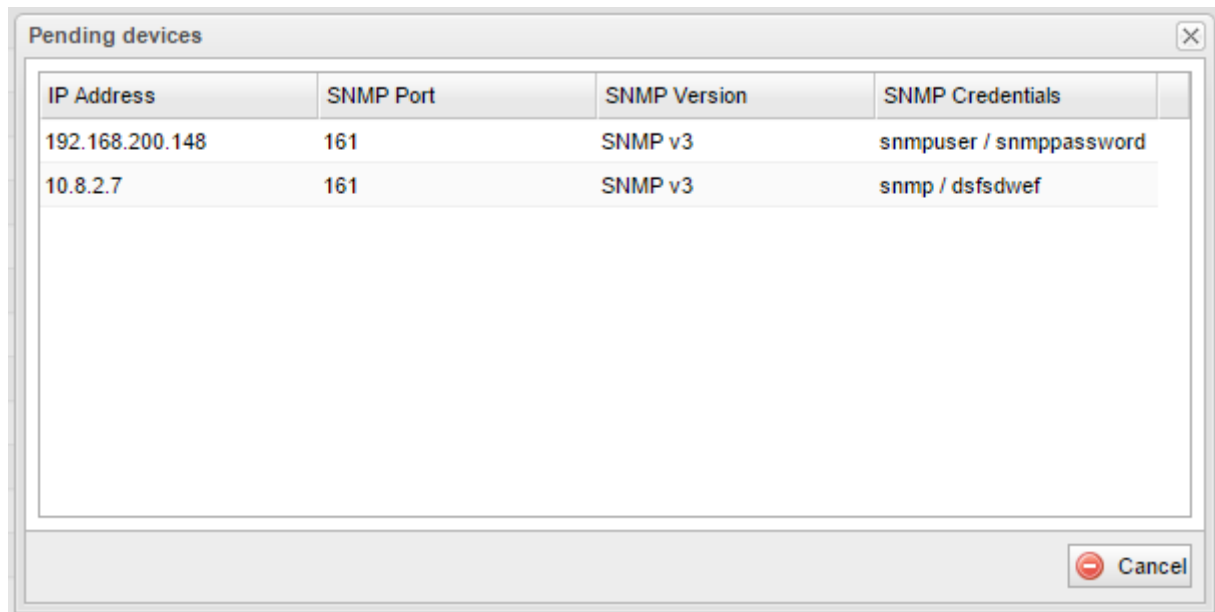

IP Address	SNMP Port	SNMP Version	SNMP Credentials
192.168.200.148	161	SNMP v3	snmpuser / snmppassword
10.8.2.7	161	SNMP v3	snmp / dsfsdwef

Figure - Pending hosts



NOTE

If the host is pending for a long time, it can indicate the authentication credentials are incorrect and/or the SNMP server has not been started on the host. Check the settings and correct them if necessary.

Adding links

InfimONITOR automatically defines wireless links between the hosts therefore there is no need for their manual addition.