Maintenance

•

•

•

•

Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer. \oslash

To the certification exam

This section is available in the "Service" tab, is used for firmware updates, operations with licenses and configuration. Allows to view extended information about the device, reboot and reset to factory settings.



License

License contains information about allowed frequencies, channel width and power limit. This section allows to view the current license and upload a new one. To upload a license on device, click the "Upload license" button drag and drop a file from your file manager into the dotted area.

Title

Upload license	License:
ſ	Factory License granted at 30/11/2018 15:06:27
Select file or drag it here	

Firmware

There are two options to upgrade firmware on the device:

• Manually - new firmware should be downloaded from official Infinet FTP server: https://ftp.infinet.ru/pub/Firmware/. Click on "Upload firmware" button and choose a firmware file. Or you can drag and drop a file from your file manager into the dotted area.

Pay attention to the hardware	 Pay attention to the hardware platform of the device being updated: For the Quanta 5 family devices with the part number contains 01 or 00 at the end, the firmware can be downloaded via the link htt ps://ftp.infinet.ru/pub/Firmware/octopus/h1855/ For the Quanta 5 family devices with the part number contains 02 or 11 at the end, the firmware can be downloaded via the link htt ps://ftp.infinet.ru/pub/Firmware/octopus/h1855-02/ For the Quanta 6 family devices the firmware can be downloaded via the link https://ftp.infinet.ru/pub/Firmware/octopus/h1855-02/ 				
 For the Quanta 5 fa ps://ftp.infinet.ru/p For the Quanta 5 fa ps://ftp.infinet.ru/p For the Quanta 6 fa 					
	Firmware version:	H18S14-OCTOPUS_PTPv1.4.0			
	Build date:	Jan 20 2021 11:47:55 64dac365			
	Serial number:	702871			
	Part number:	PN:Q5-E/04700			
	Platform:	Xilinx zynq rev.3 666 MHz Board: rev.4			

 Automatically (coming soon) - firmware may be upgraded to the latest firmware version automatically. Click on "Update", after that your web browser will try to download the latest firmware version and upload it to the unit. Firmware will be applied after unit reboot.

Upload firmware	Firmware:	
. 个 .	H18S14-OCTOPUS_PTPv1.0.2 👿 Download current firmware	
	() New release firmware v1.2.1 is available 🛛 👵 View change log	🐻 Update
Select file		
or drag it here		
()		

Configuration

The device allows to upload, download and view current configuration in text form. To view the configuration, click the "Show current configuration" button, the file will open in new window. To download the configuration, click the "Download current configuration" button, the configuration can be loaded by clicking the "Upload configuration" button, or you can drag and drop a file from your file manager into the dotted area.

Title



To upload and apply the configuration file that has been modified, please follow these steps:

- Change the "check_sum <VALUE>" command to "check_sum off" in the configuration file.
- Upload the configuration file to the device.
- Refresh the web page by pressing F5.
- To apply the settings, click "Changes" in the upper right corner and click "Apply" in the window that opens.

Diagnostic card

In situation then helps of Infinet Wireless technical support team is required, the diagnostic card is necessary tool which helps to detect and solve an issue faster and more effective. Click on "Download" button to create diagnostic card.

