

Quanta 5 / Quanta 6



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

Quanta 5 / Quanta 6 is a Infinet Wireless devices family, is used for deployment of wireless Point-to-Point links in 5 and 6 GHz frequency ranges, with a maximal performance of up to 650 Mbps.

Quanta 5 / Quanta 6 families devices are based on the Octopus SDR technology which allows to extend functionality of the device at the physical, channel and upper levels by updating the system software. Thus, the main subsystems capabilities can be determined by the software without the need to dismount or replace the device.



NOTE

Product technical specifications can be obtained from our web site [Infinet Wireless](#)

We recommend the [online course](#) for the self-study at the IW Academy portal.

About This Manual

This manual provides detailed technical information for the **Quanta 5 / Quanta 6** families devices, including system specifications, installation, commissioning, maintenance and troubleshooting.

The document is intended to be used by qualified RF engineers/technicians and IT professionals. Qualified personnel should have skills and experience with:

- Outdoor/indoor radio equipment installation
- Outdoor wireless networks
- TCP/IP networking protocols
- Safety procedures and instructions for installing antenna equipment
- Professional manipulation with electrical equipment and accessories
- Safety procedures and instructions for working at height.

Important Notice

Legal Rights

© Copyright 2021 Infinet Wireless. All rights reserved.

The information contained in this document is originated by, proprietary, confidential and owned by Infinet Wireless. No part of this document should be disclosed, reproduced or distributed without the express written permission of Infinet Wireless Ltd.

Infinet Wireless Ltd. reserves the right to change the information contained in this document without prior notice. No part of this document may be considered as a part of any contract or warranty.

Statement of Conditions

Infinet Wireless Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this manual or equipment supplied with it.

Disclaimer

The software is sold on an "AS IS" basis. Infinet Wireless, its affiliates or its licensors make no warranties, whatsoever, whether express or implied, with respect to the software and the accompanying documentation. Infinet Wireless specifically disclaims all implied warranties of merchantability and fitness for a particular purpose and non-infringement with respect to the software. Units of product (including all the software) delivered to purchaser hereunder are not fault_ tolerant and are not designed, manufactured or intended for use or resale in applications where the failure, malfunction or inaccuracy of products carries a risk of death or bodily injury or severe physical or environmental damage ("high risk activities"). High risk activities may include, but are not limited to, use as part of on-line control systems in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, life support machines, weapons systems or other applications representing a similar degree of potential hazard. Infinet Wireless specifically disclaims any express or implied warranty of fitness for high risk activities.

Indication of the countries

Infinet Wireless equipment has no geographical limitations for selling and can be supplied to any country of the world.

Limitation of Liability

Infinet Wireless shall not be liable to the purchaser or to any third party, for any loss of profits, loss of use, interruption of business or for any indirect, special, incidental, punitive or consequential damages of any kind, whether arising under breach of contract, tort (including negligence), strict liability or otherwise and whether based on this agreement or otherwise, even if advised of the possibility of such damages.

To the extent permitted by applicable law, in no event shall the liability for damages hereunder of Infinet Wireless or its employees or agents exceed the purchase price paid for the product by purchaser, nor shall the aggregate liability for damages to all parties regarding any product exceed the purchase price paid for that product by that party (except in the case of a breach of a party's confidentiality obligations).

Disposal instructions



This symbol means that this product is subject to Waste of electrical and electronic equipment (WEEE) regulations. Do not dispose of your product with other regular/household waste. Instead, hand over your waste equipment to a designated collection point for recycling.

Table of contents

- [Introduction](#)
 - [Key Features](#)
 - [Hardware Platform](#)
 - [Power supply](#)
 - [Lightning protection unit](#)
 - [Packing List](#)
- [Planning considerations](#)
- [Link Pre-configuration in the lab](#)
- [Installation](#)
 - [Mounting kit](#)
 - [MONT-KIT-85 Mounting kit](#)
 - [MONT-KIT-85P Mounting kit](#)
 - [Mounting kit for Q5-18, Q6-18](#)
 - [Cable Gland Assembly](#)
 - [Mounting](#)
 - [Grounding and Lightning Protection](#)
 - [Antenna Alignment](#)
- [Operation & Administration](#)
 - [Web GUI Access](#)
 - [Dashboard](#)
 - [General settings](#)
 - [Security settings](#)
 - [Radio settings](#)
 - [Network settings](#)
 - [Switch Settings](#)
 - [SNMP settings](#)
 - [Spectrum Analyzer](#)
 - [Antenna Alignment Tool](#)
 - [Maintenance](#)

- [Instant DFS](#)
- [Graphs](#)
- [Troubleshooting](#)
- [Glossary](#)