

Network Access



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

The "Network Access" page allows you to perform general networking configuration settings and it is divided in the following two sections:

- "Network Settings" - allows you to configure the IP address of the unit, to specify a VLAN ID to pass and to enable or disable the DHCP for the IP address allocation. Multiple IP addresses can be added

Network Settings

IP Address						Vlan	Vlan ID	DHCP
10	1	30	246	/	24	<input checked="" type="checkbox"/>	30	<input type="checkbox"/>

Figure - Network Settings

- "Routing Settings" - allows you to configure the routing information for the unit. You can input the default gateway IP address and add a route to a specific destination by specifying the destination network address, the network mask and the gateway for reaching the destination

Routing Settings

Default Gateway					
10	1	30	1	/	

Static Routes

Network						Gateway				
				/						
<input type="button" value="Apply"/>					<input type="button" value="Try"/>					

Figure - Routing Settings



NOTE

Read the information at the section [Apply and Try buttons](#) in order to find out the output of the «Apply», «Try» and buttons for the new configuration performed.