# **RADIUS authentication for admin users**

Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

To the certification exam

This is an example to help you to set up the RADIUS authentication (CentOS+FreeRADIUS) for admin users on R5000 devices.

^R

### Step 1

Add the R5000 client devices you want to authenticate at FreeRADIUS server to /etc/raddb/clients.conf.

client MASTER{		
	ipaddr=1.1.10.1	
	secret=pass	
	}	
•	work : sudo - Konsole	0
File Edit View	w Bookmarks Sattings Halp	
Chill pape 2	3 1 Files (sta (saddh (slianta conf	Madifia
GNO Hano 2.	3.1 File: /etc/raudb/clients.com	MODITE
#	t sockot client {	
# 00100	i  paddr = 192.0.2.4	
#	secret = testing123	
# }		



<u>/</u> N	NOTE
/e	/etc/raddb/clients.conf contains a list of devices that can query the FreeRADIUS server for AAA requests.

~Y

Read File

Where Is

Prev Page Next Page

^K

Cut Text

UnCut Tex

#### Step 2

Add users to /etc/raddb/users.

login Cleartext-Password:="password"

- "login" any user login
- "password" any user password.

client MASTER {

Get Help

ipaddr = 1.1.10.1 secret = pass

^0

WriteOut

work : sudo

Justify

Cur Pos

To Spell

^C

## Title

		work : su	ido - Konsole		0
File Edit View	Bookmarks Setti	ngs Help			
GNU nano 2.3.	1 F	ile: /etc/rac	ddb/users		Modifi
# Service	-Type = Administ	rative-User			
# On no match,	the user is deni	ed access.			
######################################	######################################	######################################	//////////////////////////////////////	## # # ##	
steve Cleartext	-Password := "st	eve" g			
I					
File Name to Wr	ite: /etc/raddb/	users			
^₢ Get Help ^₢ Cancel	<mark>M-D</mark> DOS F <u>M-M</u> Mac F	ormat ormat	M-A Append M-P Prepend	M- B	Backup File
	work : sudo				

### Figure - User adding

### Step 3

Set up your devices:

• Set up local login and password (you can choose any login and password you like).

```
sys user login
sys password pass
```

• Enable AAA authentication.

sys useAAA

- Specify IP-address and password. Use actual address of your RADIUS server instead of "10.10.10.128".
- Instead of "pass" use actual password you have specified on step 1.

aaa -auth=10.10.10.128,pass start

• Save configuration.

co sa

### Step 4

Make sure your **R5000** devices and RADIUS server have full IP connectivity (devices can ping RADIUS server address and vice versa) and no firewalls are enabled bet ween RADIUS server and R5000 devices.

We also recommend disabling FreeRADIUS server firewall.

```
sudo systemctl stop firewalld
```

Start FreeRADIUS server in debug mode.

sudo radiusd -X

Step 6

Try to login to R5000 device via Web interface or Telnet using login and password you have specified on step 2. If configuration is correct you will be able to access the device management and see the FreeRADIUS server output similar to the following:



Figure - FreeRADIUS server output