

Web GUI Access



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

Web User Graphical Interface (**Web GUI**) - is the basic way to configure and operate a wireless unit.

WANFlex OS starts automatically when you power on the unit, Web GUI is enabled by default. In order to access the unit via Web browser, type an IP address in the address bar.



NOTE

By default any username and any password can be used to login device Web GUI.

It's strongly recommended to set permanent username and password after the first log in. In order to do this go to the "[General settings](#)" section.

The image shows a web browser window displaying the login page of the Web GUI. The page has a light gray background. At the top, the word 'Login' is written in a blue font. Below it is a white rectangular input field with a thin blue border and the placeholder text 'Enter your login' in a light blue font. Further down, the word 'Password' is written in a blue font. Below that is another white rectangular input field with a thin blue border and the placeholder text 'Enter your password' in a light blue font. At the bottom center of the form area is a green rounded rectangular button with the text 'Log in' in white.

Figure - Web GUI login