

## Configuration and management



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

**InfIMONITOR NEXT** is configured and managed via a web interface.

Enter in the browser address bar the link to the web interface of the monitoring system: `http://XXX.XXX.XXX.XXX`, where `XXX.XXX.XXX.XXX` - is an IP address, set at the **InfIMONITOR NEXT** [installation](#) step. To change the IP address use the [service mode](#).

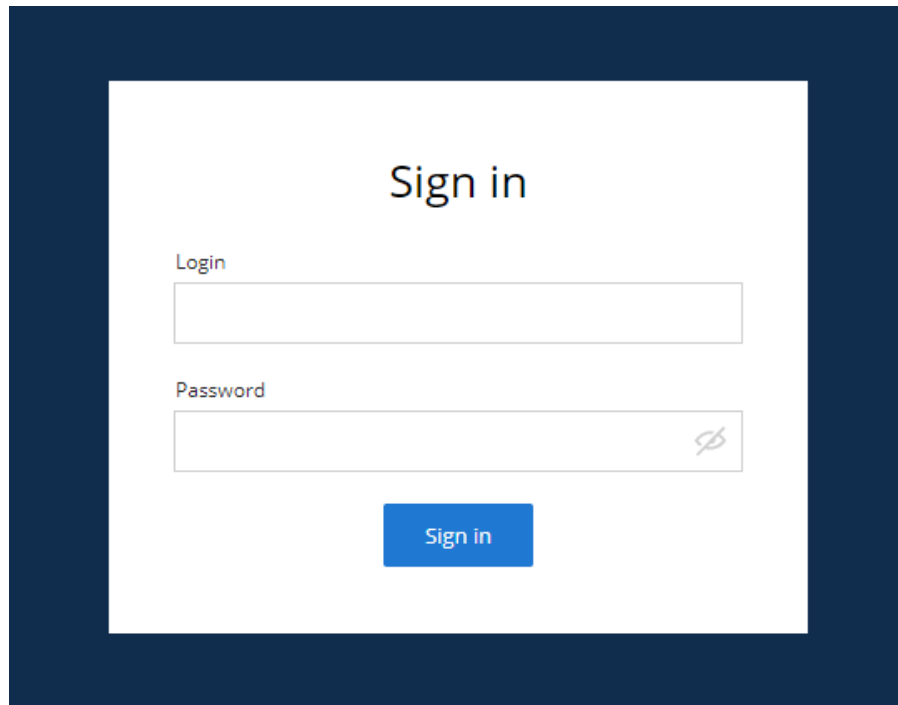


Figure - Authentication in NEXT web interface



### NOTE

For authorization use login and password of the user account with a Superadmin role which has been set in the installation wizard.