rfconfig command (TDMA version)

Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

To the certification exam

- Description
- Parameters
- Examples

Description

The command is used to configure a radio interface. This document describes the command in WANFIeX software version with TDMA technology support.

() CAUTION

Not all radio interfaces have the same set of parameters and options because it depends on the radio module type and standard. A complete list of parameters available for the specific interface can be displayed by "*rf interface ?*" command. Radio module type and its features list can be displayed by "*rf interface cap*" command.

Syntax:

usage: rf in	nterf	ace parameters		
Interface rf	£5.0	parameters:		
band XX	XX:	bandwidth (MHz)		
grid B	G:	<pre>frequency grid - <bw> freq1[-freq2[/step]], clear</bw></pre>		
freq XX	XX:	central frequency (MHz)		
bitr XX	XX:	bitrate (Kbps)		
txpwr XX	XX:	tx power (dBm)		
sid XX	XX:	system identifier - up to 8 hex digits [10101010]		
cap [ful]	1]:	RF capabilities		
txrt XX	xx:	max transmit retries [10]		
txvrt XX	xx:	max transmit retries in voice mode [5]		
[-]dpd		: dpd mode (digital pre-distortion)		
[-]burst	:	burst mode (Super Packeting)		
[-]short	gi:	short guard interval mode		
[-]pwrct]	1:	automatic TPC mode		
[-]transi	ient	: transient mode		
mimo miso	С			
[-]misoct	tl			
[-]greenf	field	l		
stat[1] [stat[1] [qos] [mcs] [OPT]			

If frequency roaming is enabled, make changes to the roaming profile using "mint profile" command before making changes on the unit.

Parameters

Parameter	Description				
cap	Displays the radio module capabilities including the information on power levels, frequencies etc.				

Title

band XXX	Allows choosing the bandwidth for transmission, can be specified as numeric or text values:						
	• " <i>double</i> " – 40 MHz.						
	• " <i>full</i> " – 20 MHz.						
	 <i>nan</i> – 10 MHz. <i>"guarter"</i> – 5 MHz. 						
	The ability to switch between different bandwidth values is determined by the license. Within the same wireless network, devices must have the same values for this parameter.						
grid B G	Allows to create a customized frequency grid within the license restrictions, i.e. to form the list of operating frequencies.						
	• " <i>B</i> " – the bandwidth for which the frequency grid is formed.						
	• "G" – list of sub ranges with the defined frequency step (start frequency–end frequency/step), or a list of comma delimited standalone frequencies.						
	The resulting frequency grid can be viewed in radio interface properties and used in all cases when the frequency is determined automatically ("r oaming", "dfs" and so on).						
	• " <i>clear</i> " – restores the default frequency grid supplied in the unit's license.						
freq XXX	Sets central operating frequency in MHz. Must be equal at the both sides of the link.						
bitr XXX	The bit transfer rate in Kbit/s of the radio link. Allowed values are:						
	 bandwidth 5 MHz: 3250, 6500, 9750, 13000, 19500, 26000, 29250, 32500 Kbit/s. 						
	• bandwidth 10 MHz: 6500, 13000, 19500, 26000, 39000, 52000, 58500, 65000 Kbit/s.						
	 bandwidth 20 MHz: 13000, 26000, 39000, 52000, 78000, 104000, 117000, 130000 Kbit/s. bandwidth 40 MHz: 20000, 60000, 00000, 120000, 120000, 270000, 270000, 270000, Kbit/s. 						
	⁻ banuwidti 40 MHz. 50000, 60000, 90000, 120000, 160000, 240000, 270000, 500000 Kbit/s.						
txpwr XXX	Sets the transmitter emitting power in dBm. The acceptable transmit power values can vary depending on the radio module type.						
sid XXX	Network identifier, a arbitrary hexadecimal number in the range of 1H to FFFFFH. All routers that are supposed to see each other on the same radio link must have the same identifier.						
txrt XXX	Sets the maximum number of repeat requests to be done when sending unicast packets. By default is 10.						
txvrt XXX	Sets the maximum number of repeat requests for data packets (excluding voice packets) in voice mode. By default is 5. The maximum allowed value is 64. Voice mode is turned on automatically when VoIP traffic appears.						
[-]dpd	Enables/disables digital pre-distortion mode. Allows to improve the signal quality by compensating of distortions that occur in the transmission path.						
[-]burst	Enables/disables the BURST protocol support.						
	The BURST protocol is grouping several short packets with the same destination address on a radio link into larger packets, thus significantly						
	decreases the response time for applications when intensive streams of short packets appears. BURST has influence to a whole radio interface						
	on selected device, but the BURST protocol can only work for destinations where it is also enabled at the other end, and only if MINT protocol is						
	used at both sides. Bortsh uses not anect the operation of other devices in the network.						
	BURST protocol operation statistic can be viewed by using the " <i>muffer stat</i> " command. Enabled by default.						
[-]shortgi	Enables/disables the short guard interval mode. Using of this mode allows the device to increase its throughput by reducing the time interval						
	between symbols being transmitted. However, this may significantly increase the intersymbol interference and, thus, cause a higher errors rate. Enabled by default.						
extnoise Y	Raises / lowers the noise level, allows to reduce the interference influence (in case of level increasement) or to increase the received signa the						
CALIFOIDE A	modulation (in case of level decreasement). Available values are from -16 to 32 dB. By default - 0.						
[-]pwrctl	Enables/disables Automatic Transmit Power Control (ATPC) When it is enabled the system automatically adjusts device's output power to the						
[-]pwica	optimal value that is necessary and sufficient to maintain the maximum productivity of the link in the given conditions. Enabled by default.						
[-]transient	Only for the InfiLINK Evolution / InfiMAN Evolution families devices. Enables/disables the InfiLINK 2x2 / InfiMAN 2x2 families compatibility mode.						
	To ensure operation in compatibility mode, configuration changes must be made, which are detaily described in the article: Upgrade from R5000 to Evolution.						
mimo l miso	Allows to select a signal coding method: MIMO or MISO.						
,							

[-]misoctl	In this mode the device use MISO for transmission of service packets while working on a low modulation. It allows keep the link operation when a transmitter in one the polarizations fails or in case of signal levels imbalance in different streams. To disable this mode use the "-misoctl" parameter.			
[-]greenfield	Id Enables/disables " <i>Greenfield</i> " mode. This mode reduces the transmitted frame size, removing the original (pre-802.11n) field from the header. Allows to increase the performance by 15%, as well as avoid the processing and decoding of noise preambles, which leads to an improvement of signal quality.			
stat[1] [qos] [mcs]	 Displays the radio module's statistic. For more information about table values see "Examples" subsection. "1" – shows statistic in current moment, if not specified, the statistic is displayed in real time. "qos" – shows priorities statistic. "mcs" – shows modulation statistic. "OPT" – shows statistic of all parameters. 			

Examples

Displays the radio module's parameters.

```
rf cap
  Radio capabilities:
  Model name:
                                          InfiNet Wireless RMM54 Rev4
                                         Atheros AR9220 Wireless PCI Adapter. InfiNet Wireless RMM54 5.5
  Adapter name:
GHz Radio rev 04 Beamsteering Antenna
  Subvendor: 0xfff1, Subid 0x5404
  Power levels (dBm):
                                         min -10 max 30 step 0.5
  Greenfield mode supported
  Smart Antenna, 16 Beams, 1000ns, HW#0, SW#18, Enabled
  MAC address:
                                         000435136C7B
                                          28, 3.5, 7, 14, 30, 15, 5, 10, 20, 40
  Bandwidth modes:
  Bitrate list:
                                         30000, 60000, 90000, 120000,
                                         180000, 240000, 270000, 300000
  Frequency bounds (40 MHz):
                                         4800-6060
  Frequency grid (user defined):
                                         4800-6060/100
  Frequency list (12 channels):
     4900\,,\ 5000\,,\ 5100\,,\ 5200\,,\ 5300\,,\ 5400\,,\ 5500\,,\ 5600\,,\ 5700\,,\ 5800\,,\ 5900\,,\ 6000
```

Possible ways of how to set frequency grid are shown in the following example:

```
rf rf5.0 grid 40 4920-5940/5
rf rf5.0 grid 20 5310-5390/10,5450,5500-5580/20
rf rf5.0 grid 10 5480, 5500, 5520, 5540, 5560, 5580
```

Set the bandwidth value 20 on the node which use frequency roaming.

mint rf5.0 profile 1 -band 20
rf band 20

Display the current radio module's statistic.

RF rf5.0 status UP (band 40, freq 5400) :ACTIVE								
ms DL/UL:Auto	(DL2500/UL2500)							
tics	Transmit statistics							
300000 2564270416 1174142362 10147084	Voice Mode Bytes Transmitted Frames Transmitted OK Multicast Frames	OFF 3133097156 755978882 1852112						
134484 11177 1504	Load (kbps) Load (pps) Frame size (bytes)	141136 7044 2504						
45.0% 92.1%	TX Medium Load Frame Time Used	46.6% 98.2%						
186877 74928 1 13 11187590 -96 4 / 48 11 2 127 112	Too Short/Long Frame Aggr Subframe Retries Aggr Full Retries FIFO Underrun Excessive Retries Max aggr frames Max aggr bytes Scrambled frames Tx queue overflow Tx Time Limit (us) Tx Cap (Mbps)	0 / 4 1207537 8900 0 1233 52 65430 0 1377218266 1942 139						
	40, freq 5400) ms DL/UL:Auto tics 300000 2564270416 1174142362 10147084 	40, freq 5400) :ACTIVE ms DL/UL:Auto) (DL2500/UL2500) tics Transmit statis 300000 Voice Mode 2564270416 Bytes Transmitted 1174142362 Frames Transmitted OK 10147084 Multicast Frames 						

- "RF rf5.0 status UP (band 20, freq 4900) :ACTIVE" interface status, bandwidth, frequency, state.
- TDMA status Master (5 ms DL/UL:Auto) (DL2500/UL2500) (PTP mode) TDMA status, frame size, DL/UL ratio, network topology.
- "DFS status OFF" DFS status.
- "Broadcast Rate" current bitrate value for Broadcast and Multicast packets on the BS (depends upon the speed of the slowest CPE).
- "Voice Mode" presence/absence of voice traffic. If some appears, mode of it's prioritized processing is turned on.
- "Bytes Received" number of received bytes including headers.
- "Bytes Transmitted" number of transmitted bytes including headers.
- "Frames Received OK" number of correctly received frames.
- "Frames Transmitted OK" number of correctly transmitted frames.
- "Multicast Frames" number of received multicast frames.
- "Load (kbps)" wireless link load (Kbit/s).
- "Load (pps)" wireless link load (packets/s).
- "Frame size (bytes)" frame size (bytes).
- "Medium Load" time spent to receive frames (%).
- "Frame Time Used" average transmitted frame fill rate (%).
- "Medium Busy" time during which the medium was occupied (reception or transmission) (%).
- "Duplicate Received" number of duplicate packets received.
- "Aggr Subframe Retries" number of packet drops in an aggregate due to protocol excesses (for transmission).
- "Lost frames" number of frames lost.
- "Rx Collision" number of cases when the frame transmission interrupted the receiving.
- "Aggr Full Retries" number of duplicate aggregates transmitted.
- "FIFO Overrun" number of FIFO queues overruns in the radio when receiving.
- "FIFO Underrun" number of FIFO queues underruns in the radio while transmitting.
- "CRC Errors" number of received packets with CRC errors.
- "Excessive Retries" number of packets which were not transmitted with maximal number of retries.
- "Noise Floor" input noise level. Measurement cycle –10 seconds.
- "Max aggr frames" maximal detected number of packets in an aggregate.
- "Max aggr bytes" maximal detected bytes in an aggregate.
- "Scrambled frames" number of received/transmitted scrambled frames.
- "Scramble errors" number of scramble errors.
- "Tx queue overflow" data queue overflow for transmittion.
- "Rx Subslots" subslots number for UL frame part.
- "Rx Time Limit" quota of useful data in microseconds for UL.
- "Tx Time Limit" quota of useful data in microseconds for DL.
- "Rx Cap (Mbps)" capacity limit for UL (Mbit/s).
- "Tx Cap (Mbps)" capacity limit for DL (Mbit/s).