DFS menu




Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

To the certification exam

The "DFS" page provides the monitoring and management of the DFS operation. The DFS status and availability indicators are shown for each frequency for the given band and grid. The indicators are described in the Legend at the bottom of the page.

By clicking the «Clear NOL» button, you clear the non-occupation list with the blocked frequencies (due to the radars detected on these frequencies). The DFS subsystem rescans those frequencies and if they are still not available, the scanning starts after the time period displayed in the right bottom corner of the frequency indicator.

By clicking the «Re-select Channel» button, you restart the DFS scanning.

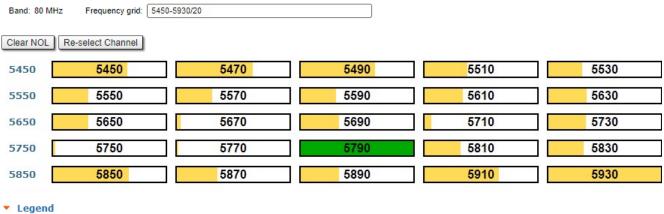

5000 Available channel. Yellow bar indicates interference level 5005 Channel in use 5010 30s Channel availability check in progress. Remaining time shown at bottom right Channel monitoring active 5020 Blocked channel. Remaining time shown at bottom right 5025 Inconsistent configuration Non-verified channel

Figure - DFS