

## Web GUI Access



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)



### NOTE

Connecting third-party equipment via Ethernet (switches, PCs), make sure the PoE, Energy Efficient Ethernet and Green Ethernet functions are disabled on the network interfaces connected to Infinet devices.

When you power on the unit, **WANFlex OS** starts automatically and Web management is enabled by default so, in order to access the unit via Web browser (start the graphical user interface), type in the address bar the default address: 10.10.10.1/24.



### NOTE

The system allows concurrent login sessions via Web interface.

On the login page, you can type any username and any password and click Login:

← → ↻ 10.10.10.1

**InfiNet**  
wireless

User Name:

Password:

Login

Figure - GUI login



### NOTE

Please change the credentials you have just inserted with a permanent username and password for it after the first log in. In order to change the credentials proceed to the "Basic Settings" - "[System Settings](#)" section.

The default language is English. After the authentication step, the language can be changed into Russian, French, Italian or Chinese.

You can access the unit via HTTPS (HTTP with SSL only) using Infinet Wireless self-signed certificate (from the [Maintenance menu](#) of Web interface). The «HTTPS Connection» link is available in the right side of the login form:



[HTTPS Connection](#)

User Name:

Password:

Login

Figure - HTTPS connection