

Static Links



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

To the certification exam

In the "Static Links" section, you can set up fixed links to the unit. Although the radio parameters and security key match with other nodes, the node that has Static Links set up is only linked with the nodes which are configured in this section. The parameters are:

- "MAC"- MAC address of the neighbor unit
- "Key"- link security key (up to 64 characters long, without spaces).

Another two options are available:

- Disable the link by marking the option "Disabled" in the corresponding checkbox
- Add a link description in the "Note" field.

To restrict connections to the listed MAC addresses, the static authorization mode must be selected in the "Link settings" section for the corresponding interface.

▼ Static Links

▼ prf1

MAC	Disabled	Key	Note
<div> <div></div> <div></div> <div></div> <div></div> <div></div> <div></div> <div>X</div> </div> <div>Add</div>	<input type="checkbox"/>	<div></div>	<div></div> <div>Remove</div>

► prf2

By clicking the "Add" button, you create a new fixed link to the unit. By clicking the "Remove" button, you can delete an already created fixed link.