

Configuration and management of InfiMONITOR



Successfully pass the free certification exam at IW Academy and become an Infinet Certified Engineer.

[To the certification exam](#)

InfiMONITOR could be configured and managed via the special web-interface.

Enter monitoring system web-interface IP-address : <http://XXX.XXX.XXX.XXX>,

where XXX.XXX.XXX.XXX - IP-address assigned at [InfiMONITOR installation stage](#). In order to change the IP-address, use the [service mode](#).

System may announce you about unsecured connection while entering to the **InfiMONITOR** web-interface. This is due to the fact that the required protection certificate is not assigned by the certification authorities center. This error does not affect the **InfiMONITOR** security.



Your connection is not private

Attackers might be trying to steal your information from **192.168.102.62** (for example, passwords, messages, or credit cards). NET::ERR_CERT_AUTHORITY_INVALID



Automatically report details of possible security incidents to Google. [Privacy policy](#)

ADVANCED

Back to safety

Figure - Certificate trust request

To prove the certificate trust expand the "ADVANCED" tab and click on "**Proceed to XXX.XXX.XXX.XX (unsafe)**".



NOTE

This step may vary in different browsers.

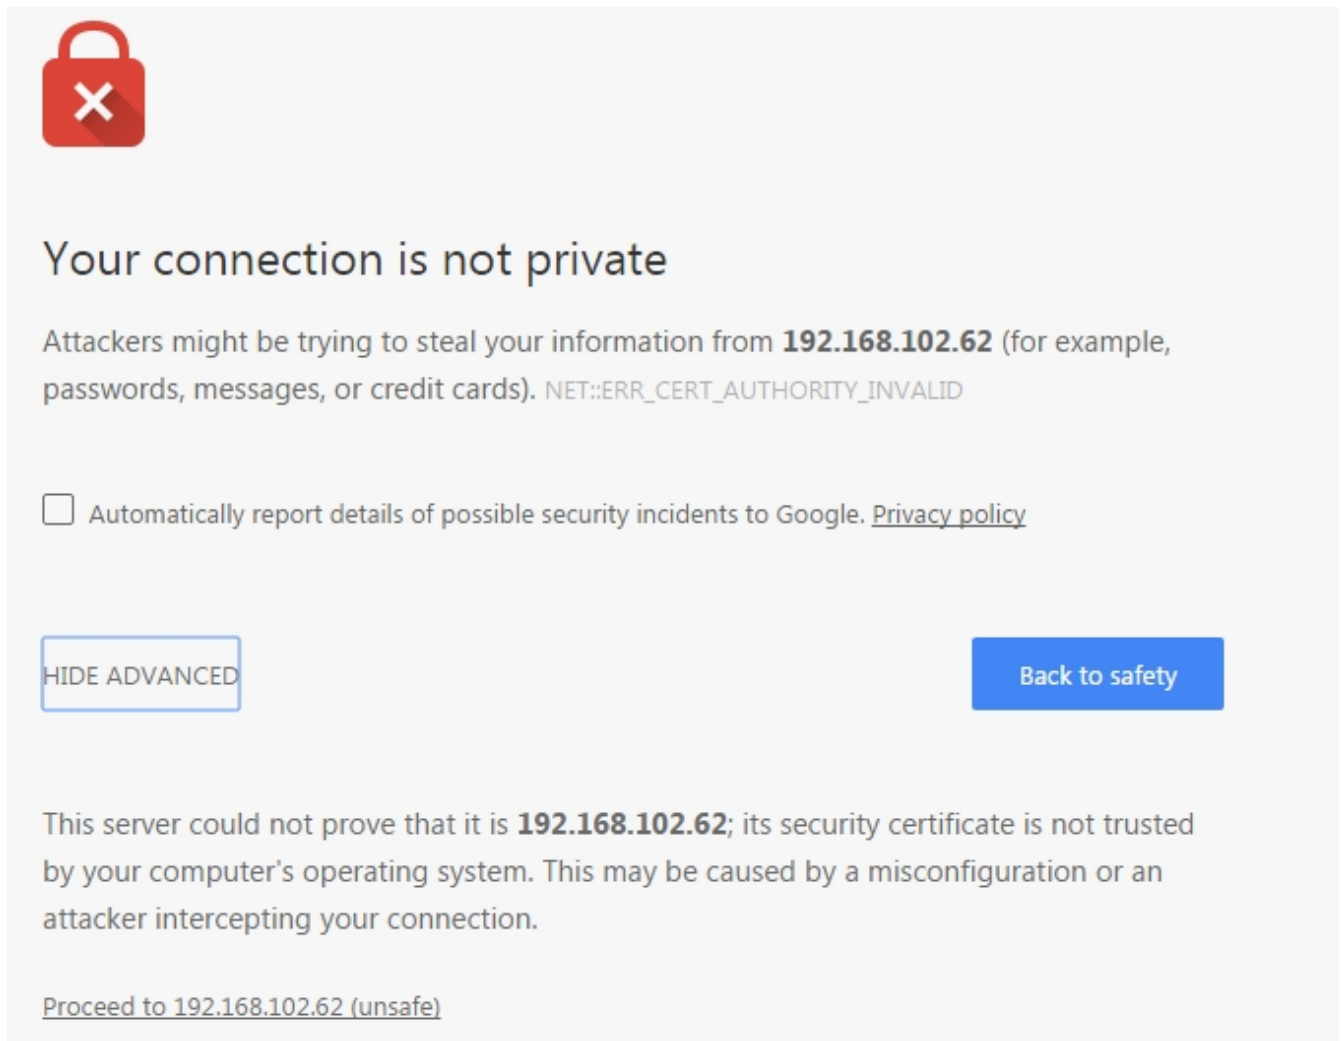


Figure - Trust proving

Afterwards you will be prompted to enter authorization data.

A screenshot of a login window for InfiNet wireless. The window has a white background with a thin grey border. At the top center is the InfiNet wireless logo, which consists of an orange square with a white stylized 'i' and the text 'InfiNet' in blue, with 'wireless' in smaller blue letters below it. Below the logo is the text 'Welcome to InfiMONITOR' in bold black. There are two input fields: 'Login' and 'Password'. Below the 'Password' field is a 'Sign In' button.

Figure - Authorisation window



NOTE

By default, use the following web-interface authorization data:

- Login - "admin"
- Password - "admin"

It is mandatory to change "admin" password, before initial configuration of the **InfiMONITOR**.

After the successful login, you will enter **InfiMONITOR** management interface. **InfiMONITOR** management interface has the following sections:

- [SNMP configuration](#)
- [User accounts](#)
- [Adding hosts and links](#)
- [Events management](#)
- [Notifications configuration](#)
- [License](#)
- [Disk space](#)